


КА SW 71 101 020



ИНСТРУКЦИЯ ПО МОНТАЖУ

комплекта электропроводки для фаркопа с 7-ми контактной розеткой (ГОСТ 9200-76)



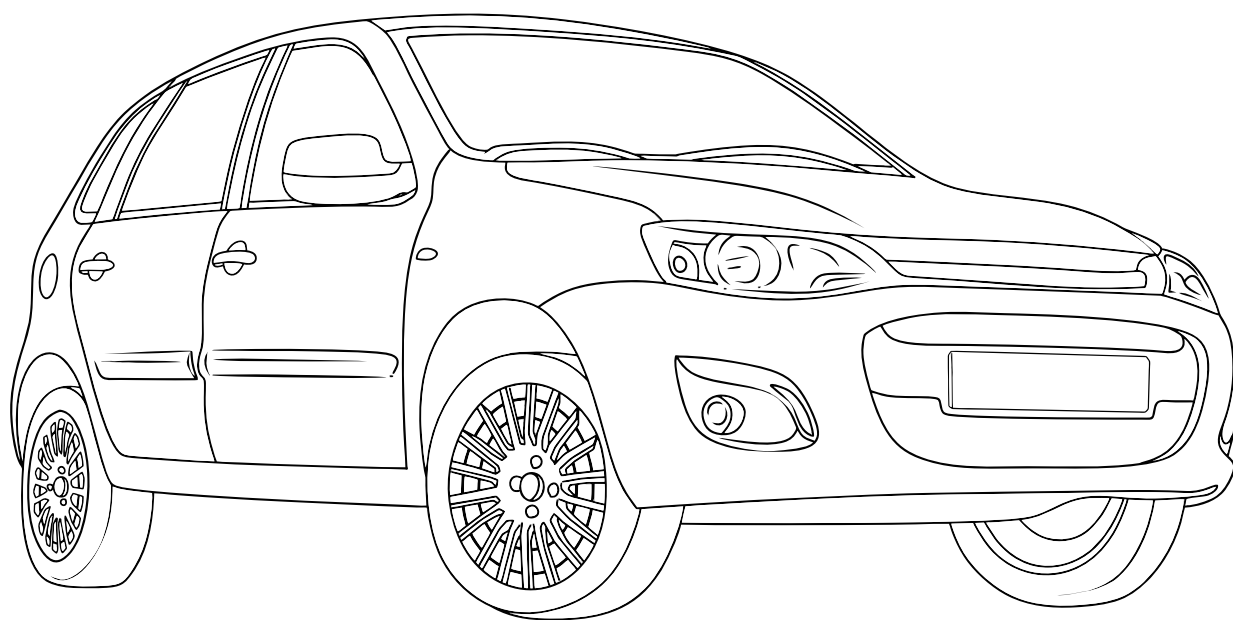


Для Lada Kalina SD/ WAG/ HB 2004-2018

1.
2.

3.

!

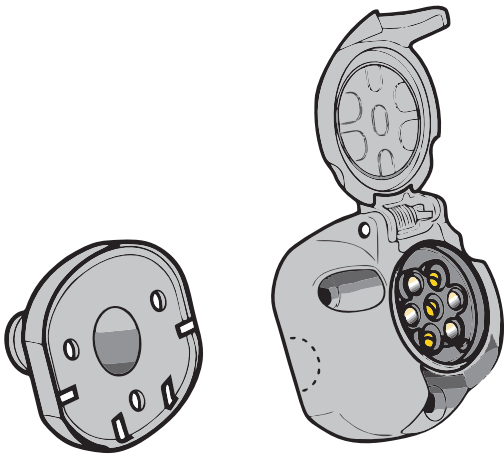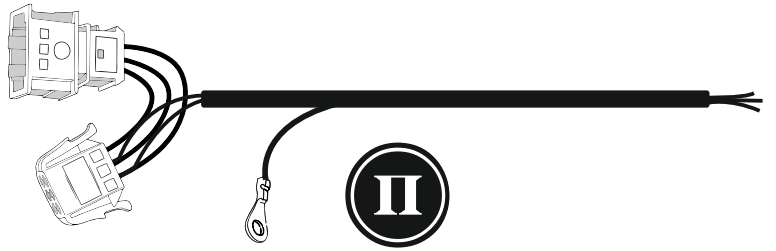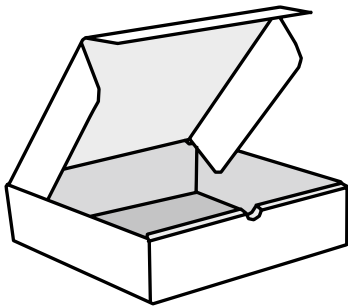

!

!




() .






(

!

!





),
CODE
CODE ()

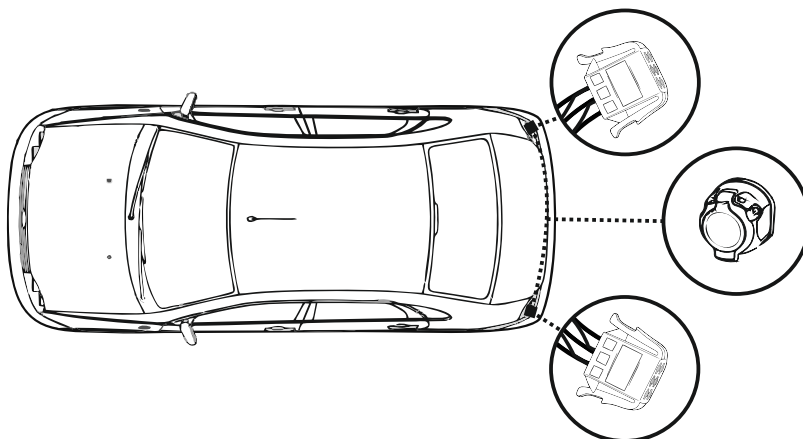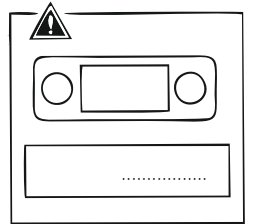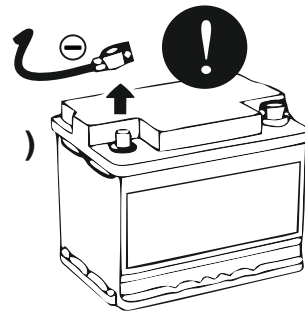


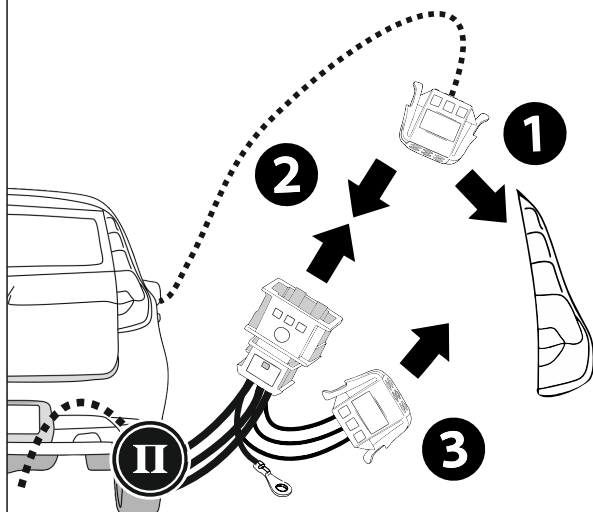
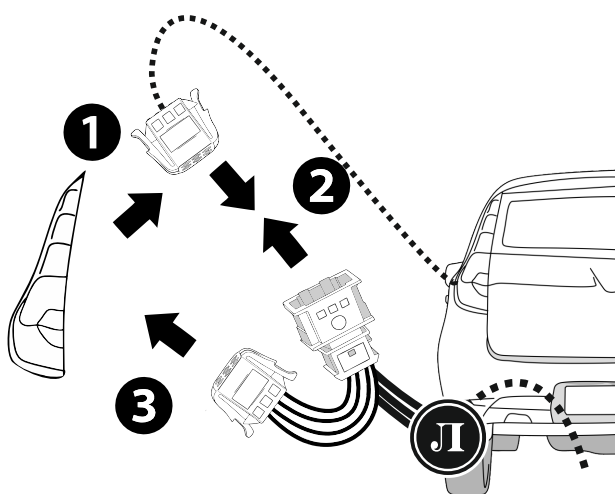
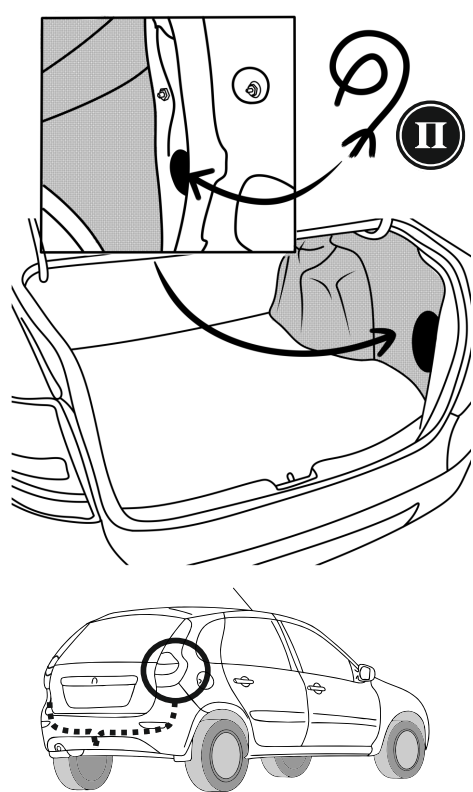
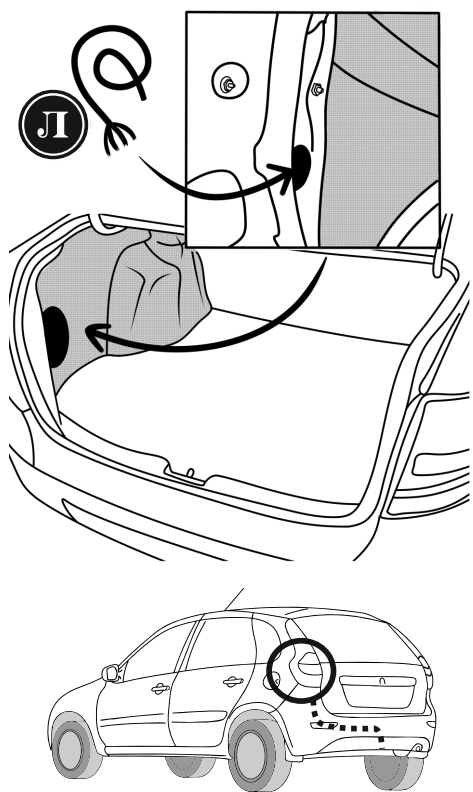
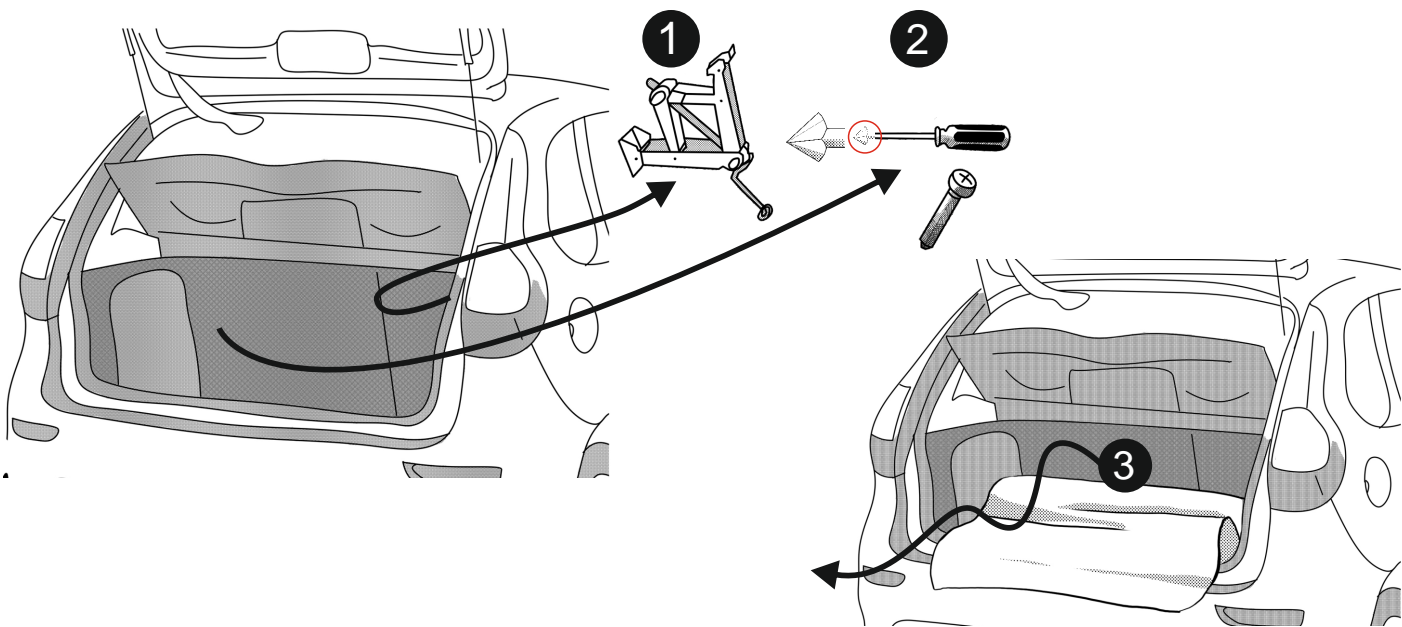


9200-76

					STOP	
1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
21W	2x21W		21W	21W	2x21W	21W
				-		

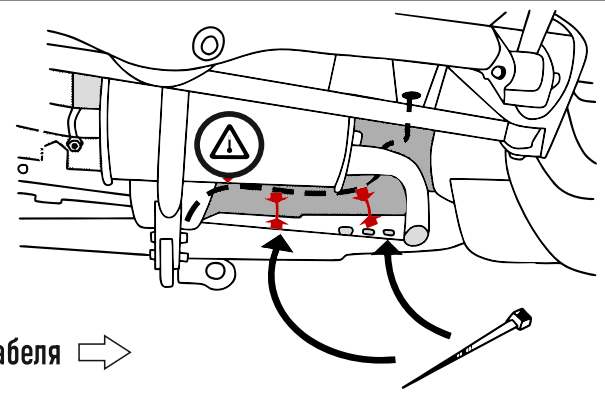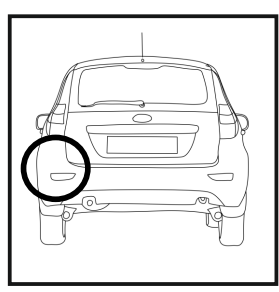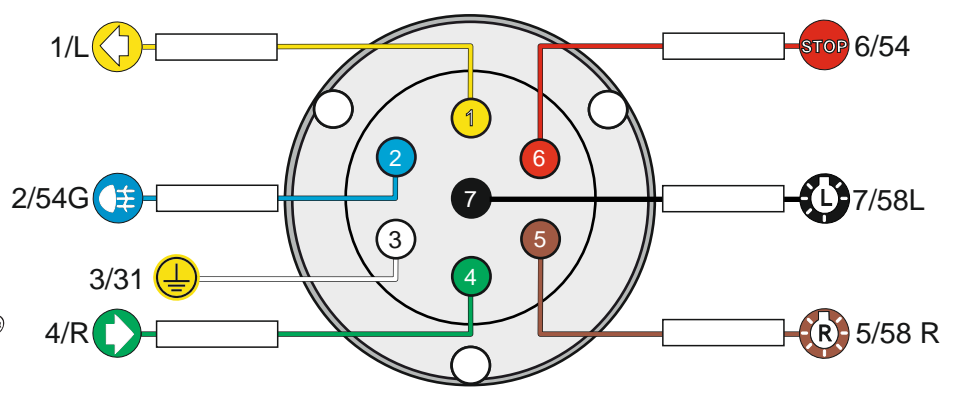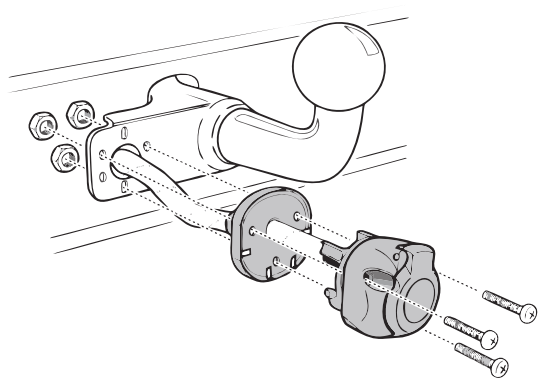

← 10 см минимально от кабеля →

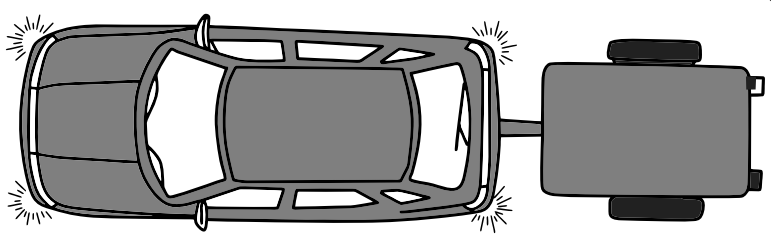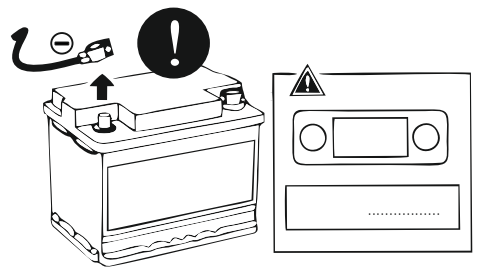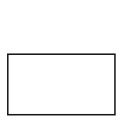

↓
OK