



FIRST TIME INSTALLATION


* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ROOF RAIL CROWN


MR01044 (SWB)

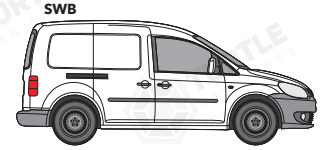

VWGN CDDY (2K) VAN 03-

ATTENTION!

If your vehicle is 2003-2010, there may be no rear holes in the vehicle's roof. So don't use the rear connections. Close the plastic caps (no.4) directly.

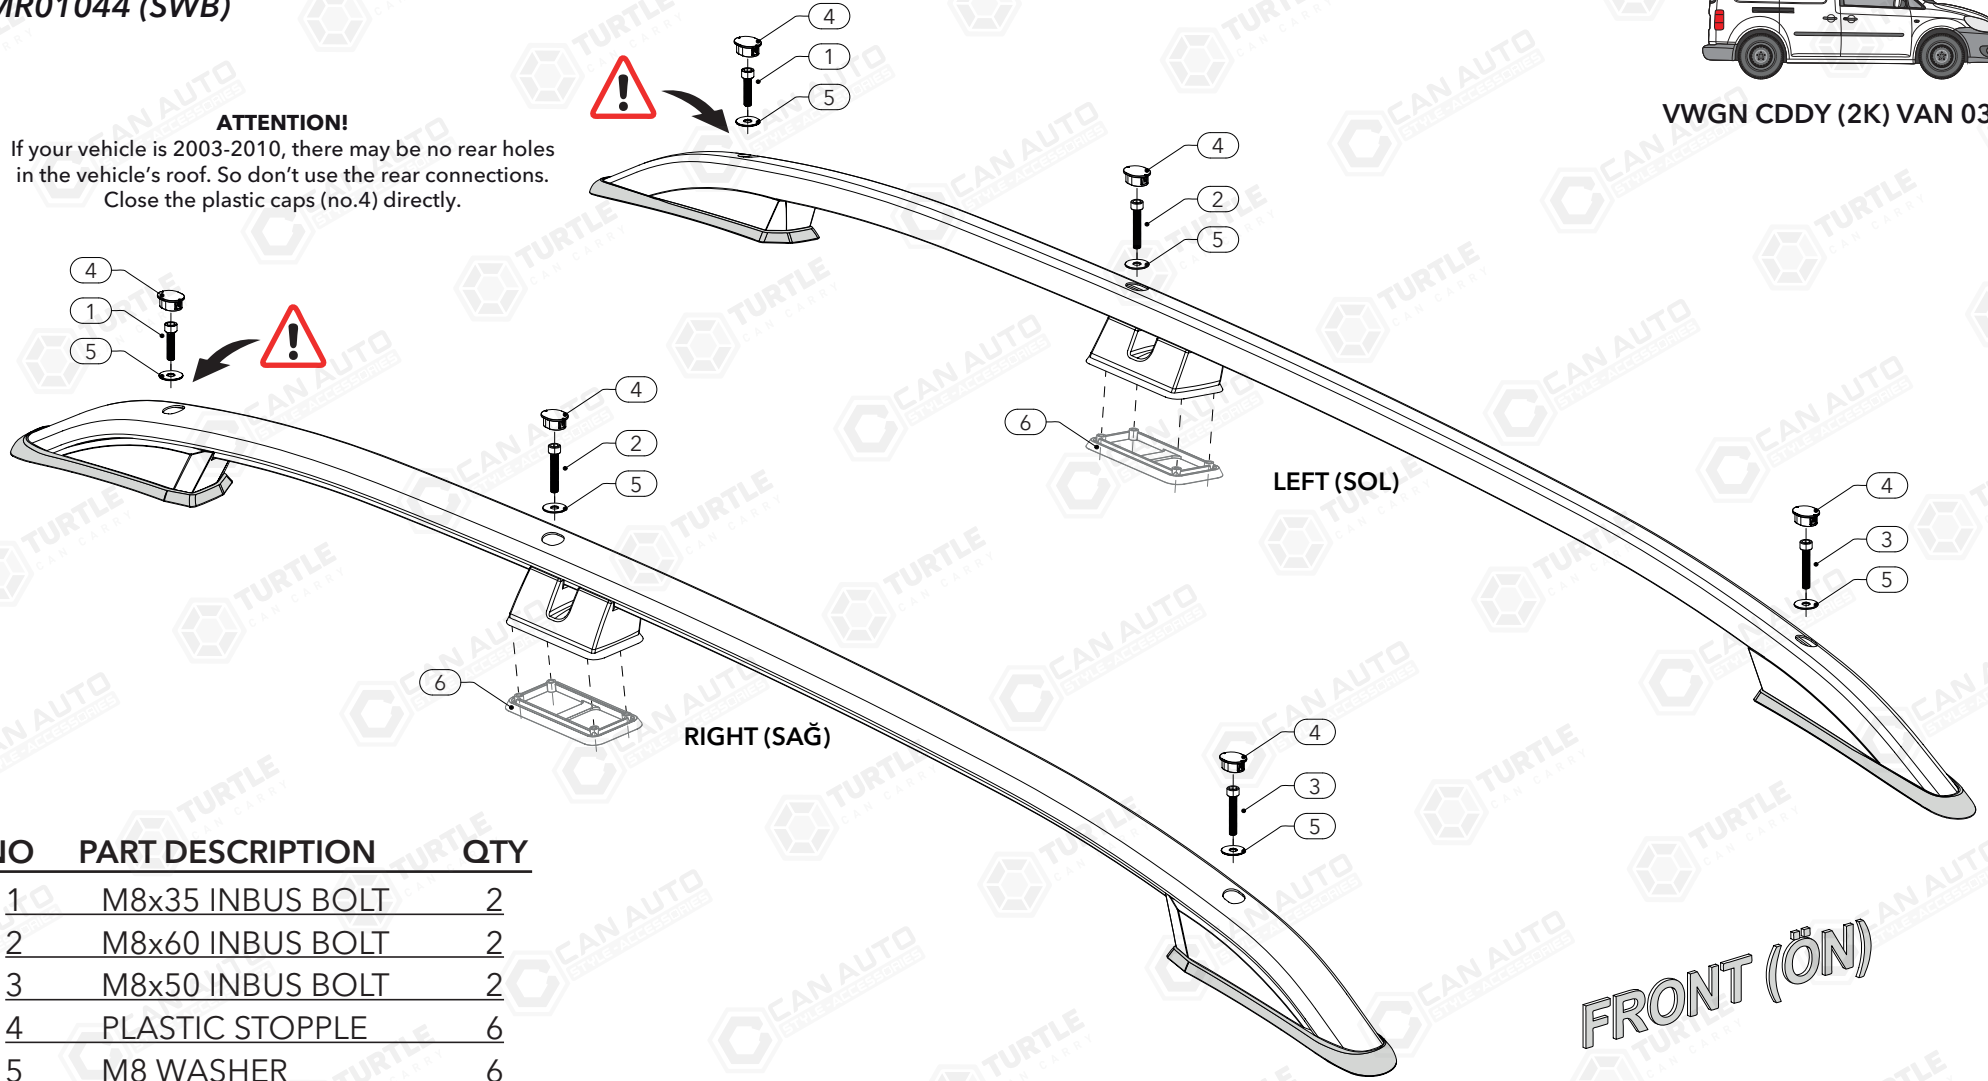

NO	PART DESCRIPTION	QTY
1	M8x35 INBUS BOLT	2
2	M8x60 INBUS BOLT	2
3	M8x50 INBUS BOLT	2
4	PLASTIC STOPPLE	6
5	M8 WASHER	6
6	RUBBER PAD MID	2