


КА СW 71 101 020



ИНСТРУКЦИЯ ПО МОНТАЖУ комплекта электропроводки для фаркопа с 7-ми контактной розеткой (ГОСТ 9200-76)




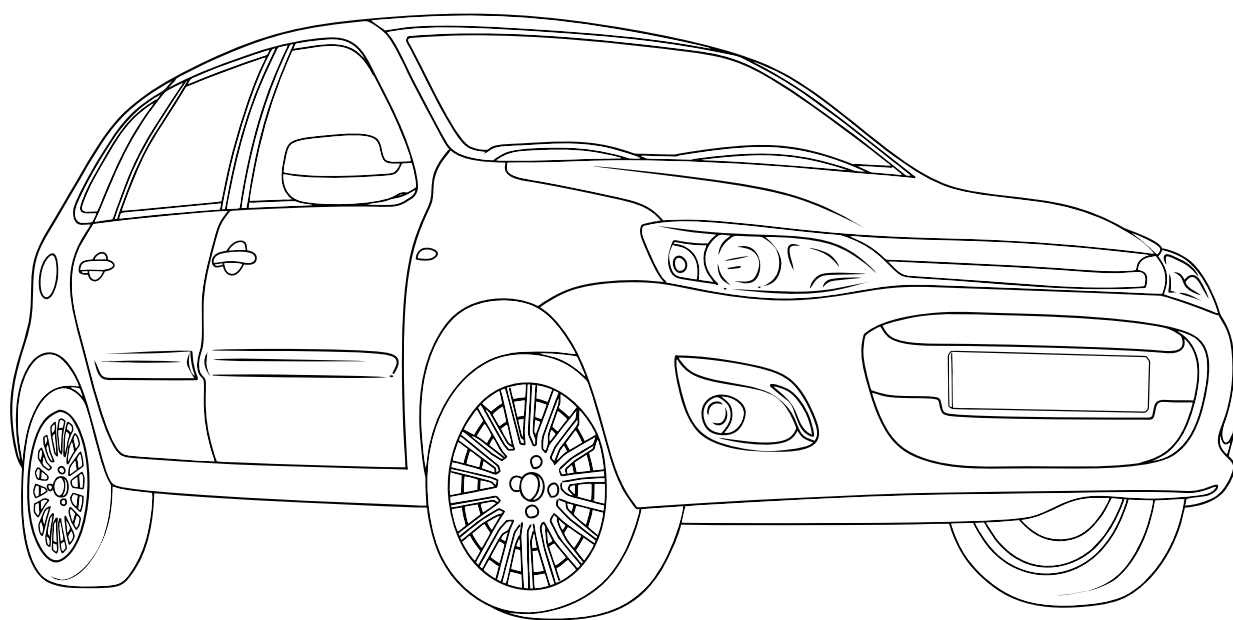


Для Lada Kalina SD/ WAG/ HB 2004-2018

1.
2.

3.

!

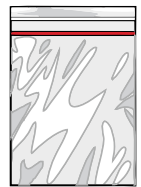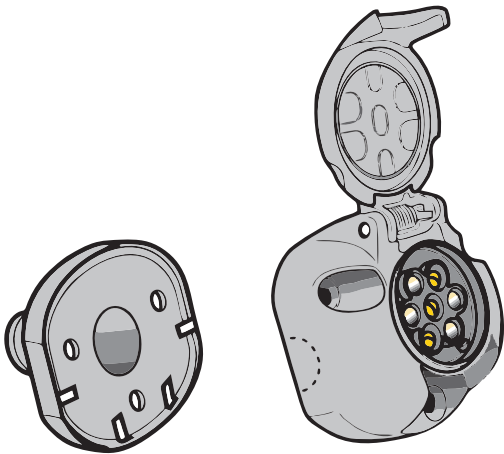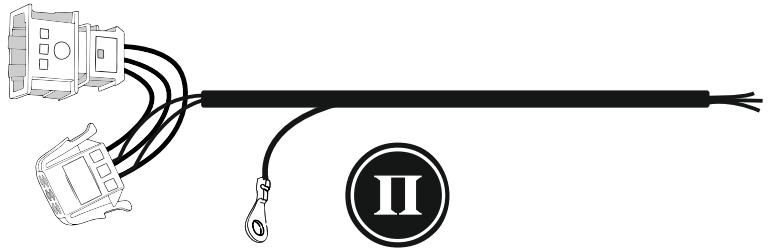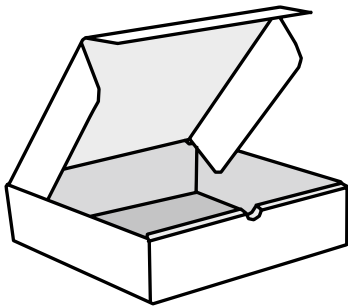

!

!




() .






(

!



!

),
CODE
CODE ()

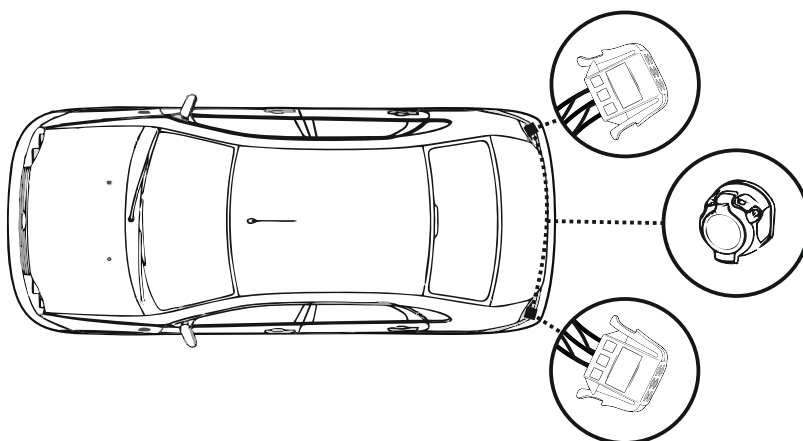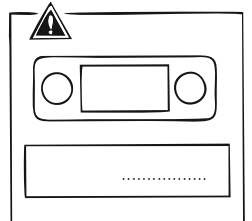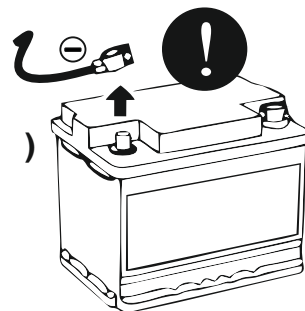

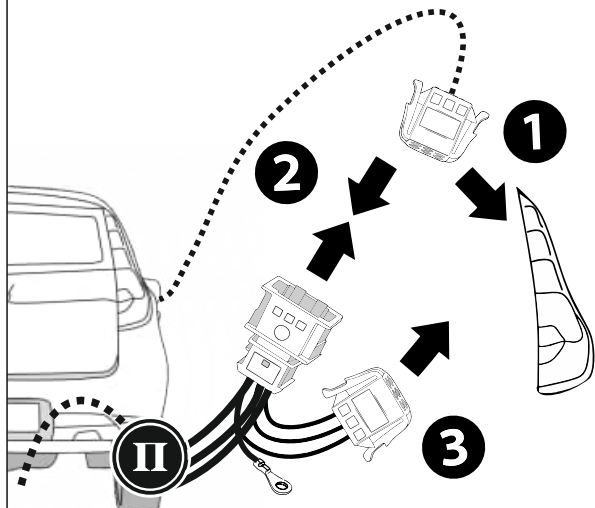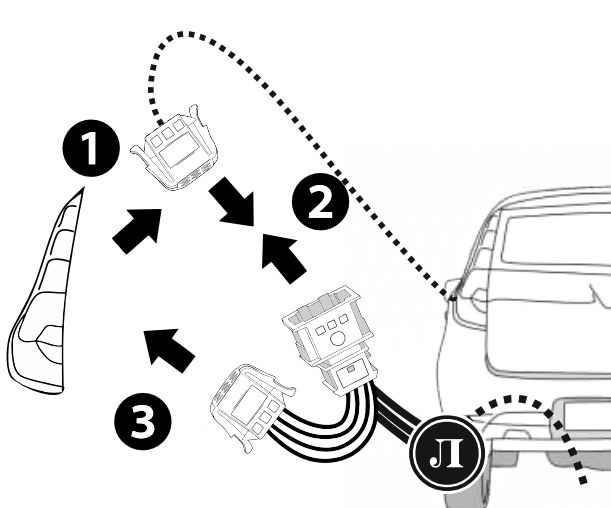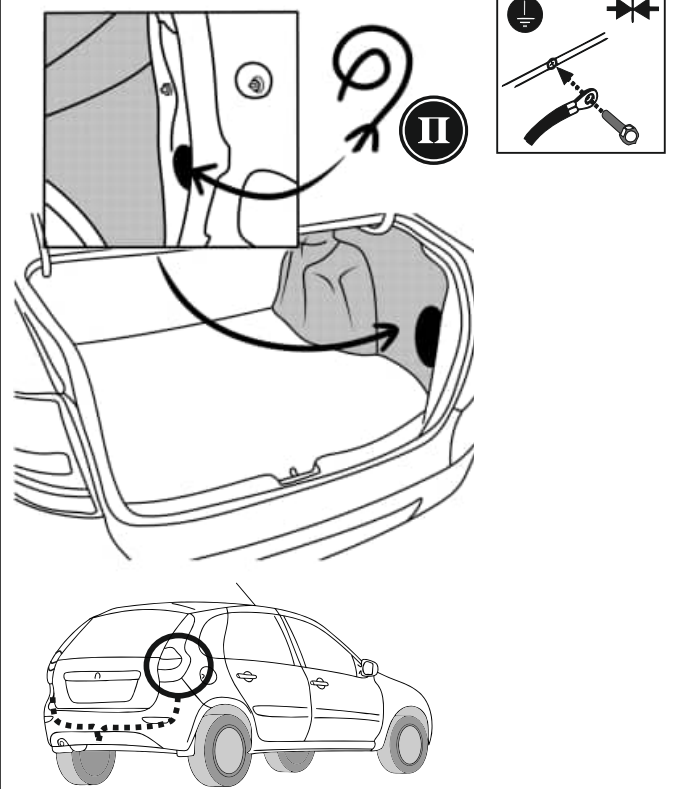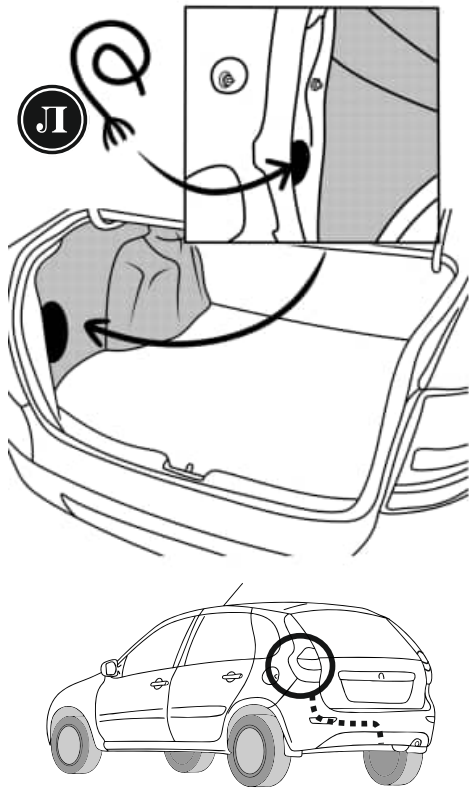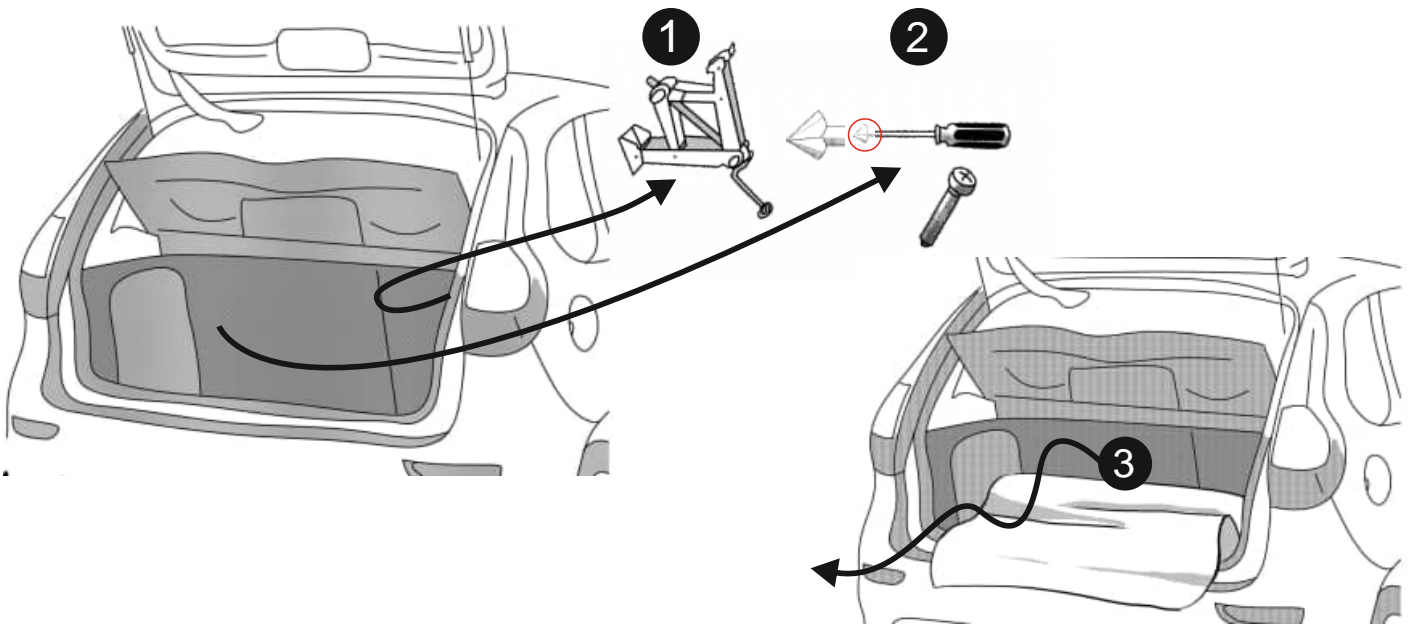

9200-76



1/L

2

3/31

4/R

5/58-R

6/54

7/58-L

21W

2x21W




21W

21W

2x21W

21W

-

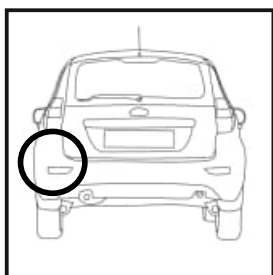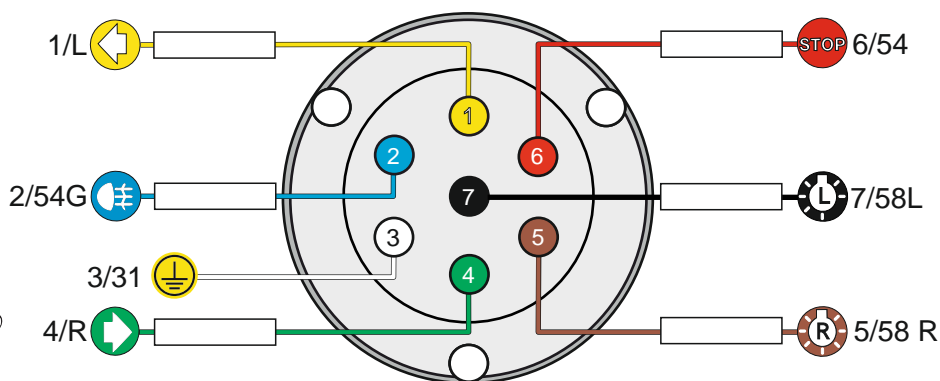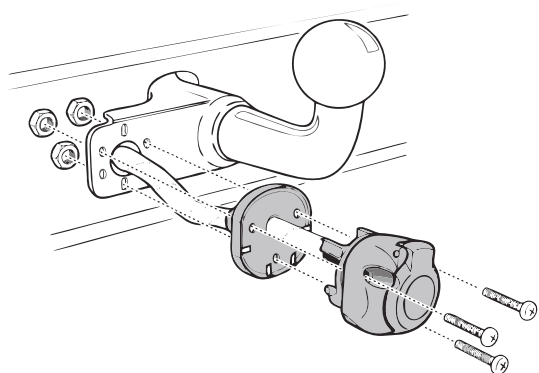

← 10 см минимально от кабеля →

