

# Ford Ranger/Ranger Raptor/Everest Volkswagen Amarok




HOOD STRUT KIT  
Installation Instruction







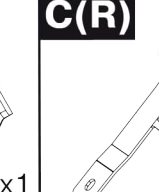
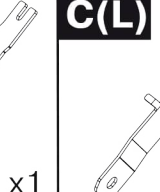
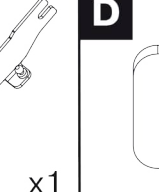
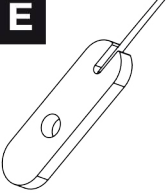
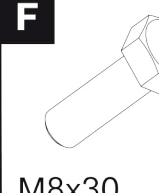
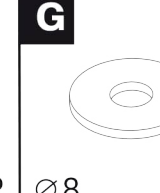
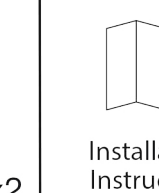
Model year: Ford Ranger / Ranger Raptor/Everest - 2022-  
Volkswagen Amarok - 2023-

Part No.: 2A.ST.5811.1


Compatibility: all types

Weight:  1.8 kg


Installation time:  30 min
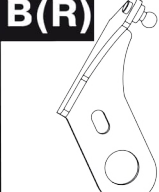
<b>A</b>  087016 x2	<b>B(R)</b>  x1	<b>B(L)</b>  x1	<b>C(R)</b>  x1	<b>C(L)</b>  x1	<b>D</b>  x2
<b>E</b>  x2	<b>F</b>  M8x30 x2	<b>G</b>  Ø8 x2	 Installation Instruction		

## Required Tools


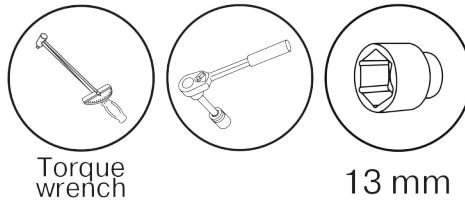


Before installation of gas struts, open the hood and check that there is no additional equipment installed in engine bay which can block installation.




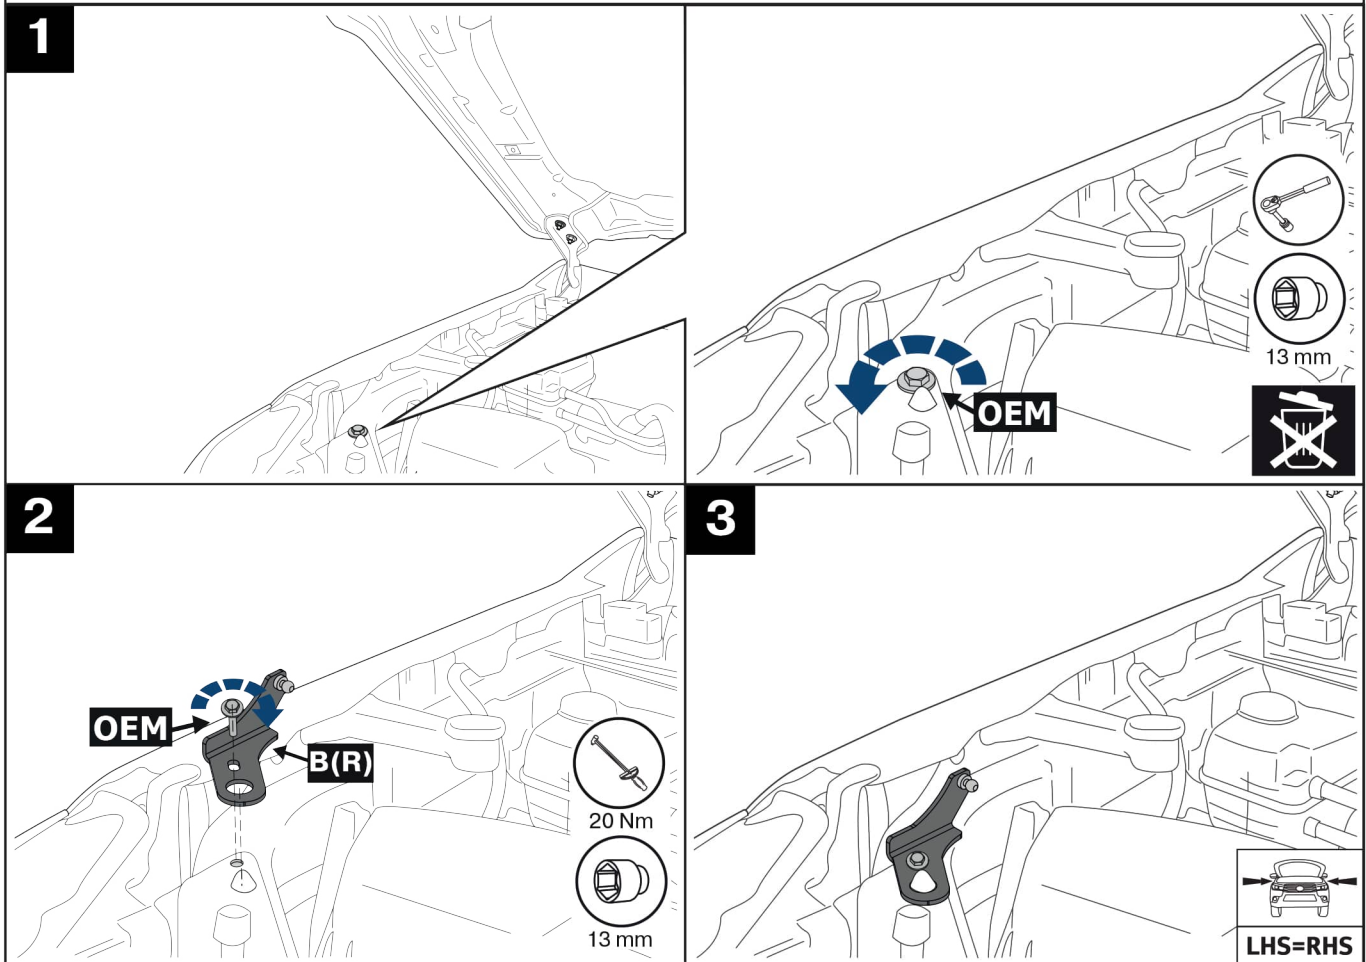


FORD RANGER/RANGER RAPTOR/EVEREST  
VOLKSWAGEN AMAROK

HOOD STRUT KIT

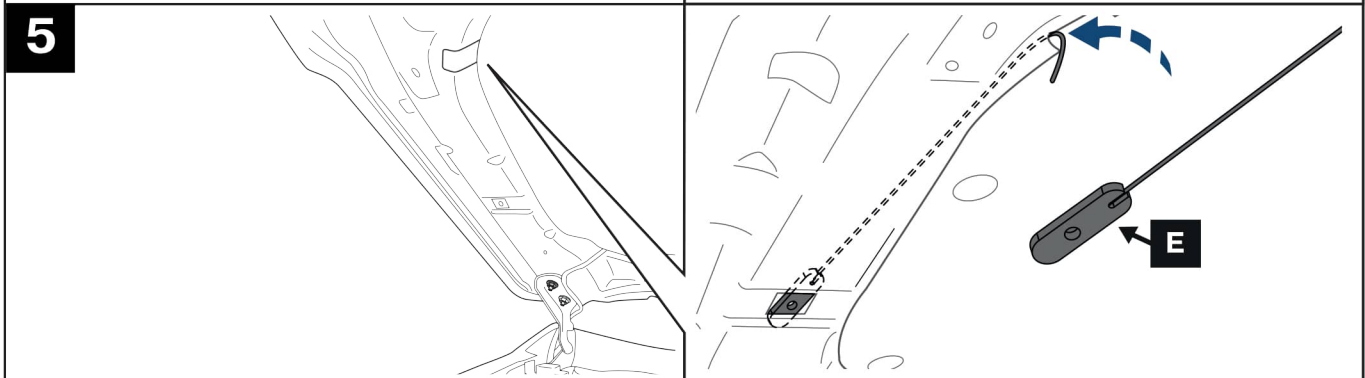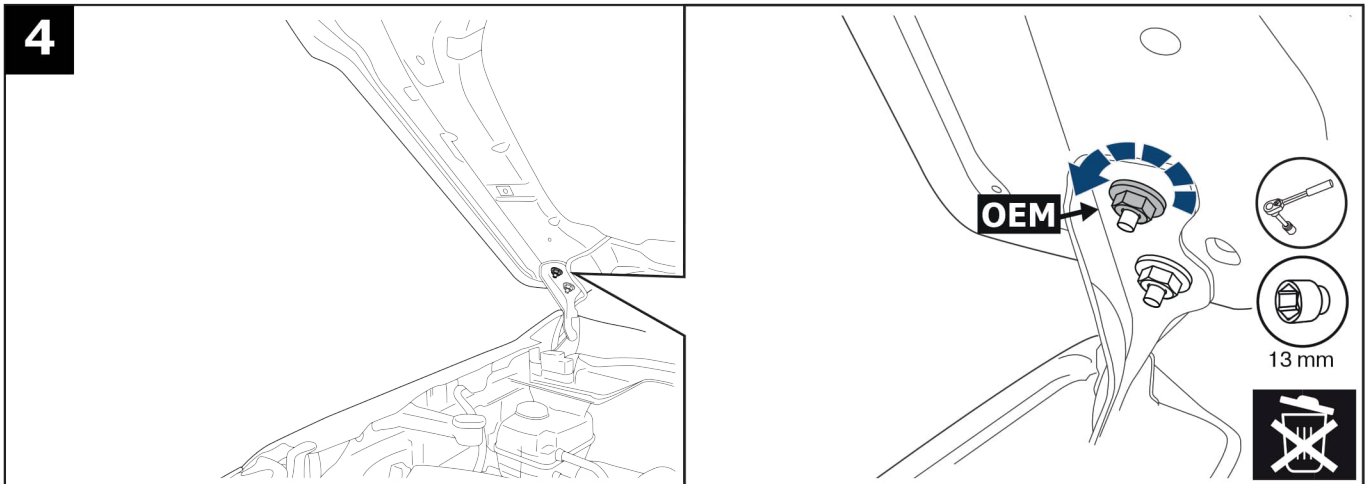

Step **6-9** only for Volkswagen Amarok

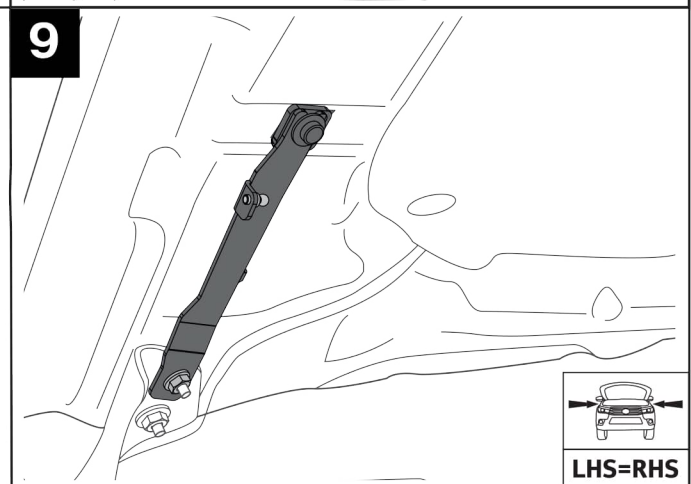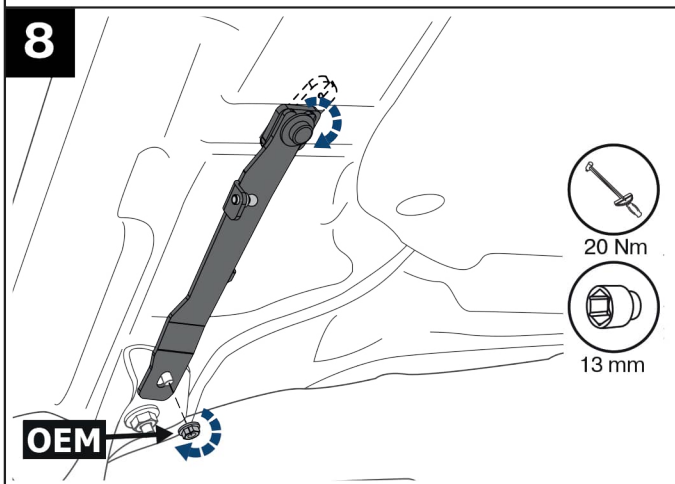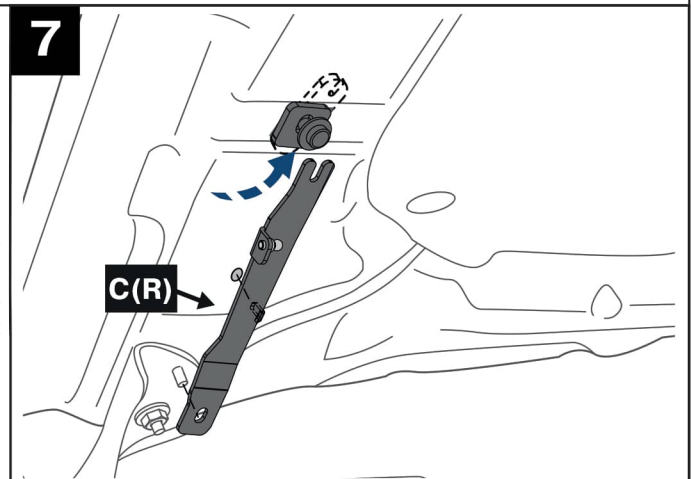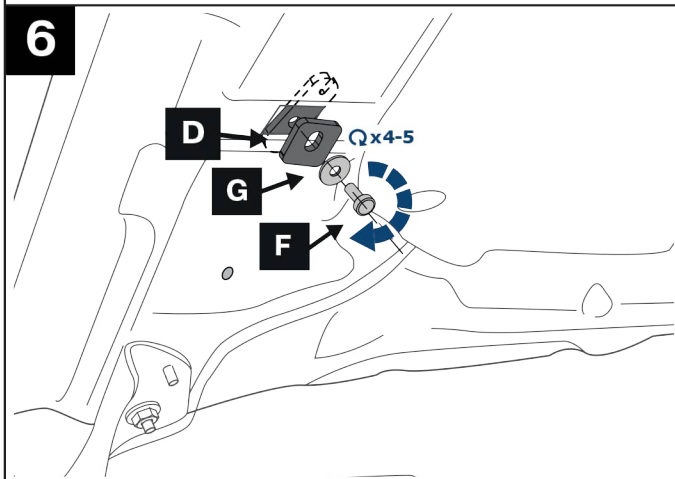


FORD RANGER/RANGER RAPTOR/EVEREST  
VOLKSWAGEN AMAROK

HOOD STRUT KIT




Step **10-13** for other vehicles


**10**

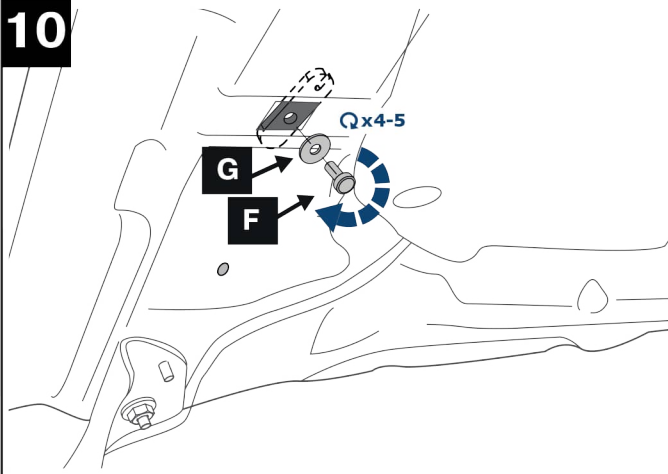


**11**

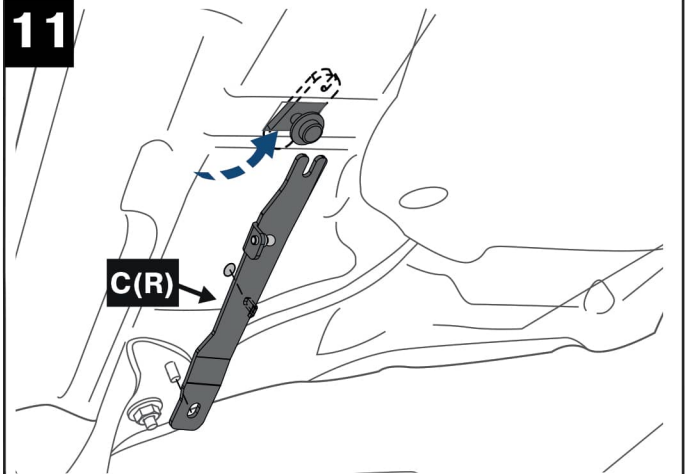


**12**

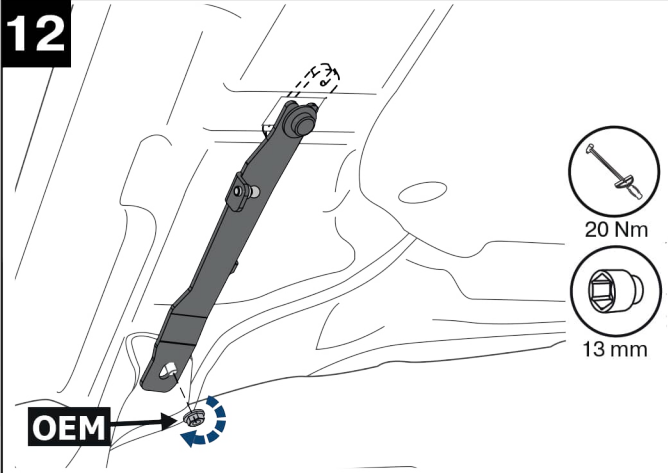


**13**

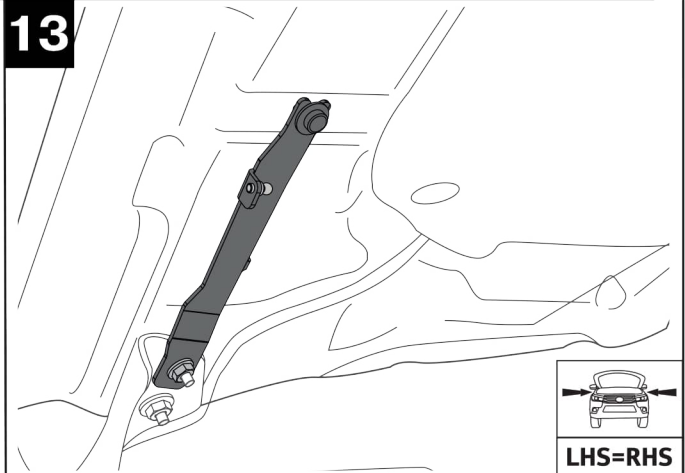

**14**

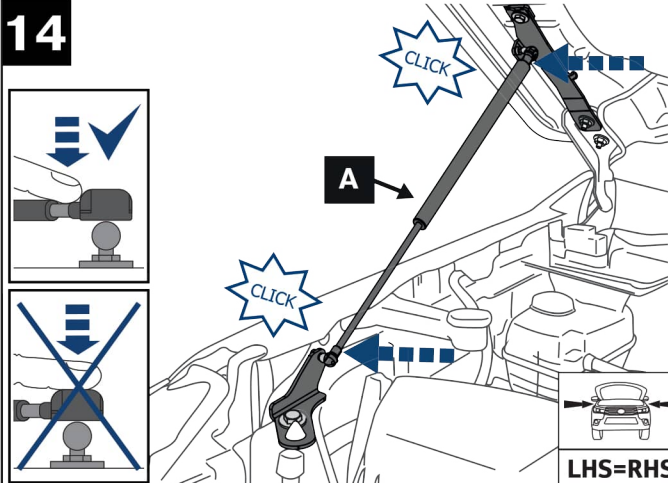

**15**

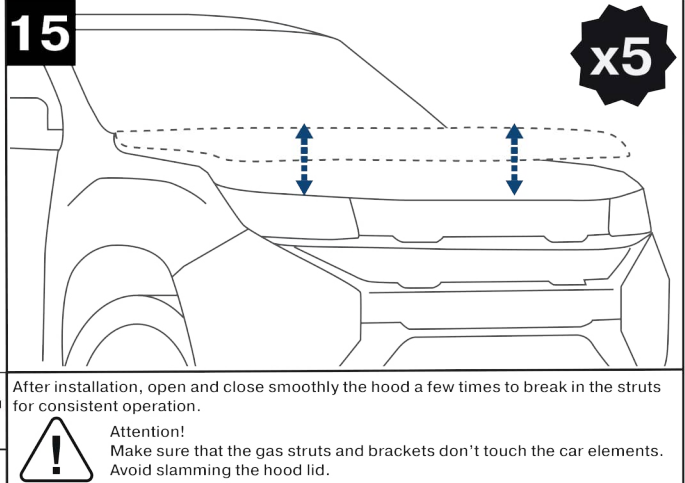

Attention!  
If it's needed to remove installed gas strut, disassemble how shown on the picture.  
Operate with the hood being totally open.



Check installation manual



After installation, check the correct operation of all elements.



FORD RANGER/RANGER RAPTOR/EVEREST  
VOLKSWAGEN AMAROK

HOOD STRUT KIT